

完全使用手册

鼓型控制器 Pro

Drum Controller Pro Version



35cm
巨大鼓面


Elite
专业级鼓面

含游戏设置及使用的所有方案

良值鼓型控制器PRO



安装步骤

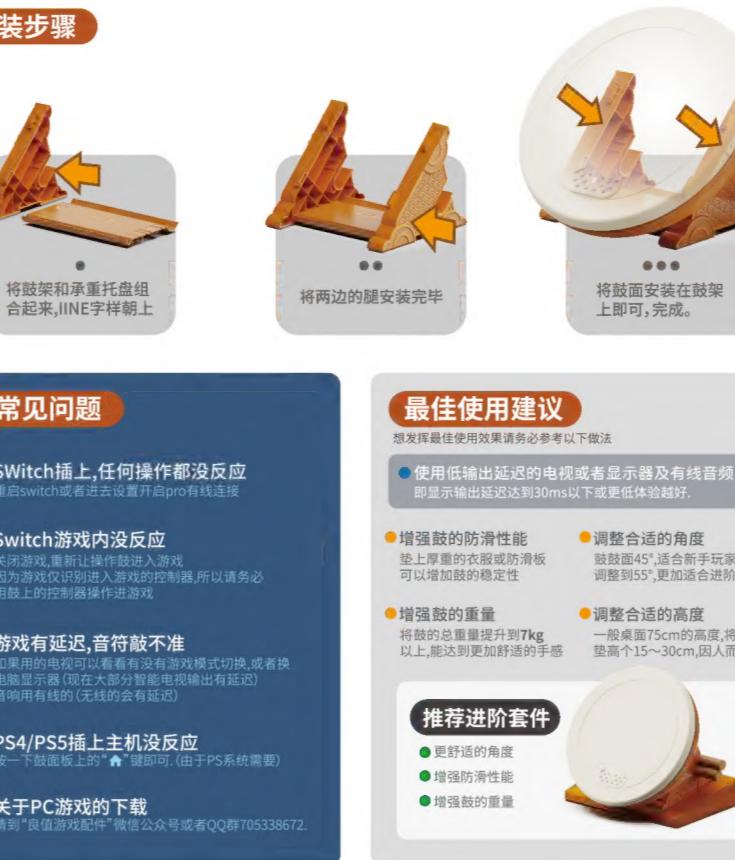

SWITCH使用教程



设置一手柄与感应器-Pro手柄的有线连接-开启第一次使用时,需要进入手柄设置开启有线连接



PC使用教程

关于PC使用

直接把鼓插入电脑的USB插口即可(设置-蓝牙和其他设备-设备-Drum Controller Pro Version)



XBOX模式切换 长按L+R 3秒再连接电脑
如果需要映射手柄时才需要切换XBOX手柄模式,切换后将会为标准的xbox手柄键位布局

PS4/PS5使用教程



将太鼓插入PS4/PS5之后,按下鼓面上的“*”仅支持PS4游戏(包括PS5里的PS4鼓游戏)



玩我想要
PLAY MY WAY



扫码二维码了解产品问题

良值
IINE

User Manual in English

Drum Controller Pro Version



35cm
Huge Drum Surface


Elite
Professional Drum

Contains Game Settings and All Schemes Used

IINE Drum Controller Pro Version



Installation Steps

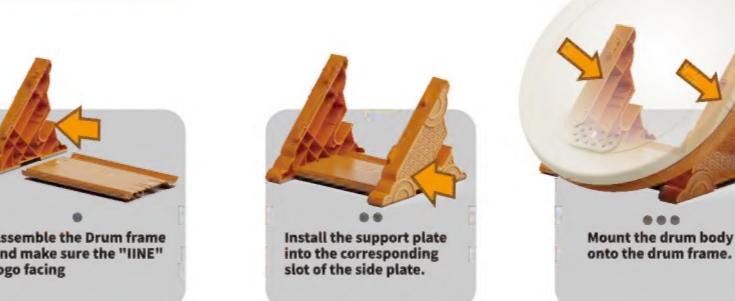

How to solve common issues?

● If no response after being connected with to Switch

Restart the Switch and make sure that open the [Pro Controller Wired Communication] on your Switch.

● If no response in the game

Close the game and restart, then enter the game by using the drum controller.Because the game only recognizes the controller which is used to enter the game.

● If Game delay, inaccurate note hits

The common reason is using a TV monitor, the solutions are above to check.Firstly, make sure that the game mode of your TV monitor is opened.Secondly, instead of a computer monitor (Since many TV monitor have output delay). Thirdly, instead of using the wired audio (wireless connections may cause delay).

● If no response when the Drum is connected with to PS4/PS5 console

Press the [HOME] button on the drum panel.

● What is the Game on the computer?

Tjplayer, referred to as TJP, can be found on the network.

Download it according to the online tutorial. If you have any questions, please search @iineofficial on YouTube and contact us.

● Adjust to appropriate height:

For instance, if you're playing games on a table that's 75cm high, you can raise the drum pad by 15 to 30cm to find the most suitable height. And so on

Best Usage Recommendations

To achieve optimal performance, please consider the following:

● Use a computer or monitor with low output latency and wired audio/With display output latency of 30ms or less, the usage experience will be better.

● Enhance drum's anti-slip properties:

Through placing thick clothing or non-slip pads underneath which can increase the drum's stability.

● Adjust to appropriate angle:

The drum surface angle of 45° is suitable for novice players, while adjusting it to 55° may better suit advanced players.

● increase the drum's weight:

Raising the total weight of the drum to over 7kg can provide a more comfortable feel.

● Adjust to appropriate height:

For instance, if you're playing games on a table that's 75cm high, you can raise the drum pad by 15 to 30cm to find the most suitable height. And so on

How to connect with Switch?



Home - System Settings - Controllers and Sensors - Pro Controller Wired Communication - On
For the first-time use, make sure that [Pro Controller Wired Communication] is on.

Only supports PS4 games (including PS4 games within PS5).

Switch the Drum Mode
Hold the L+R buttons for 3 seconds.

ZR ZR ZL ZL
Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the Switch Pro Controller]


Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

Switch the Drum Mode
Hold the L+R buttons for 3 seconds.

ZR ZR ZL ZL
Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

How to connect with PS4/PS5

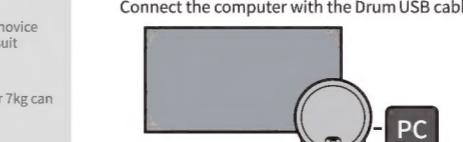

After inserting the drum into the PS4/PS5, press the [HOME] button on the drum's surface.

Only supports PS4 games (including PS4 games within PS5).


Switch the Drum Mode
Hold the L+R buttons for 3 seconds.

ZR ZR ZL ZL
Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

How to connect with computer?

Connect the computer with the Drum USB cable.

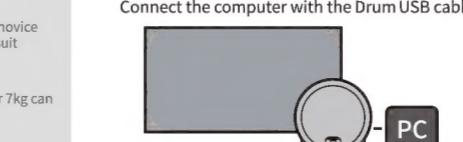

XBOX Mode Switching
Press and hold L1 + R1 for 3 seconds, then connect to the PC

Switch to Xbox controller mode only when mapping to a controller is required. After switching, it will follow the standard Xbox controller button layout.

玩家须知

性能模式切换 (PS/PS5专用)

长按L+R 3秒



新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式

Beginner Donder
[Play with the Drum Controller]
High-Performance Donder
[Play with the PS4/PS5 Controller]

Please select the corresponding Drum mode to match the Game mode, for example, if the game is in the Beginner Donder, please make sure the Drum is in the same mode, if not, please hold the L1 and R1 for 3 seconds to switch.

新手模式(太鼓模式) 高性能模式(手柄模式)

Switch to太鼓模式
Switch to手柄模式